

WISENET

NETWORK VIDEO RECORDER

Quick Manual

PRN-4011



Features



 
 
 
 



The product records video and audio from network cameras to a hard disk, and enables playback from the hard disk. It also provides remote monitoring environment for video and audio over the network using a remote computer.

- User-friendly UI
- Supports a range of 4K camera resolutions (3840X2160, 4096X2160, 4000X3000)
- Outputs a 4K high definition image using HDMI
- 64 split screens decoding
- Supports dual monitor output (expand, duplicate)
- Record and play video
- Record and play audio
- Supports ONVIF Profile S standard and RTP / RTSP protocols
- Display the HDD operation status by HDD SMART
- HDD overwrite enabled
- Backup using USB 2.0 protocols and external HDD
- Simultaneous play of 16 channels
- Various Search Modes (Time, Event, Smart, Text, Backup, ARB)
- Various Recording Modes (Normal, Event, Scheduled Recording)
- Alarm Input / Output
- Remote Monitoring function by Windows Network Viewer
- Live monitoring of the network camera
- Installation Wizard Function (Easy Setup)
- Supports remote viewer multi profiles
- Supports ARB
- Supports Failover
- Function used to set the storage period for each channel

IMPORTANT

Please check 'Manuals' from our website, before connecting to the Supply,
<https://www.hanwha-security.com/en/data-center/download-data/video-recorder/>

Package Contents


			
NVR	Mouse	Power Cable	Quick Manual
			
Terminal block	Rack mount	Rack mounting screw	HDD Fixing Screw
			
HDD door lock key			

Connecting an optical module


The rated power for an optical module is DC 3.3V 0.25A.



 
- When an optical module is installed, the use of the UTP port is limited.
- Install an optical module only when one is needed.

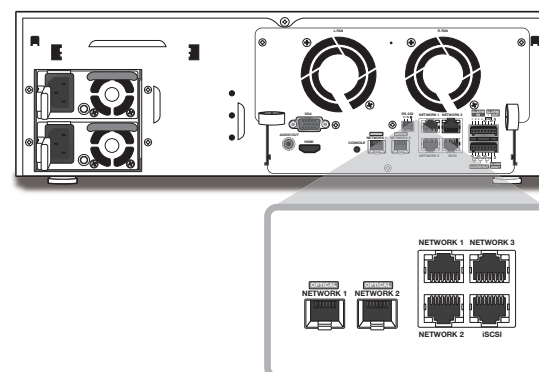

 
1 [OPTICAL NETWORK1] is a port that is shared with [NETWORK1].

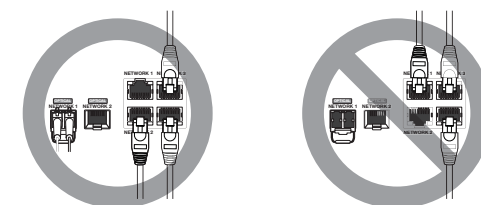

 2 [OPTICAL NETWORK2] is a port that is shared with [NETWORK2].

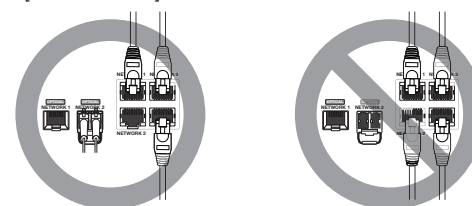


 3 [OPTICAL NETWORK1/2] is a port that is shared with [NETWORK1/2].

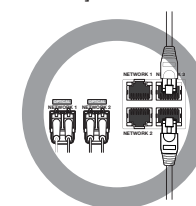


Installing the HDD

 
- 1** Press the <PUSH> button on the front to open the front cover.

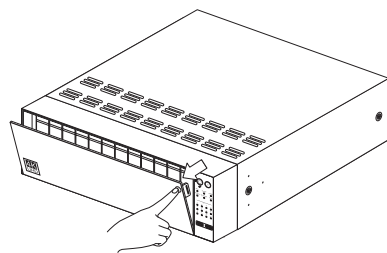

 
- 2** After pressing the blue button in the HDD bracket, pull it manually to separate the HDD bracket from the main body.

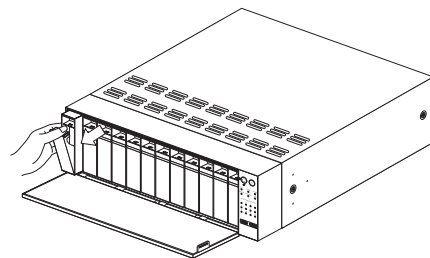

 - 3** Mount a HDD in the HDD bracket and screw it in using the screws provided.

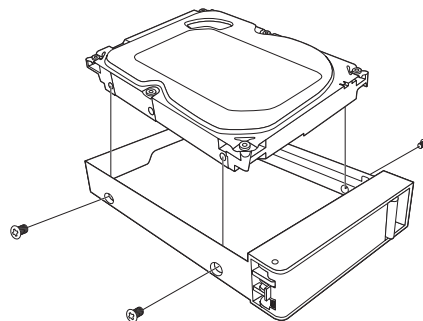

 - 4** Once the HDD is mounted in the bracket, push the bracket into the main body and close the front cover.

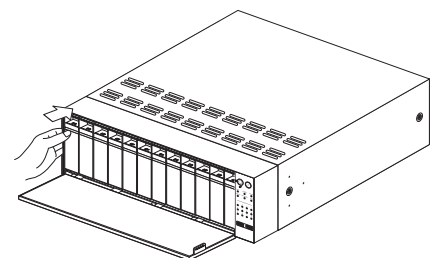

- !**
- If you are adding a new or previously used HDD to this product in addition to the HDD(s) originally installed, format the new HDD manually in the set before use.
 - For replacement or installation of an additional HDD you must contact your dealer or our customer center.

 
Install Wizard

- 1** Select the language

Select your preferred language.

- 2** Set Password

Set a password.

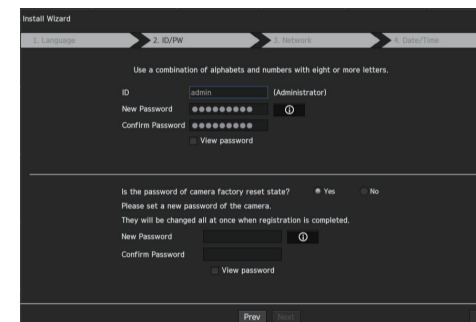

※ Click **i** icon to see the password rule. Check the password setting rules.

2-1. Setting Camera Password

You can change the password of the camera one step.

If the password of the camera is the default password set in the factory, enter a new password to change it. The password will be changed, and the new password will be registered.

If the password of the camera is not the default password set in the factory, enter the current camera password. The current camera password will be registered.

 
- New Password : Input a new password according to the password setting rules.
- Confirm Password : Input the new password again.
- A camera password registered with ONVIF and RTSP cannot be changed.

- 3** Set up Network

- DHCP server : If the DHCP server is set to enable, an IP is automatically assigned to the camera.
- Network 1 (Camera) /Network 2 (Camera) : Connects to the camera and receives the video feed from the camera.
 - When a UTP cable is connected, UTP is displayed on the screen, and when an Fiber Optic Cable is connected, OPTIC is displayed on the screen.
- Network 3 (Viewer) : This is a port for transmitting an image to the webviewer.
- Network 4 (iSCSI) : This is a port for connecting an external iSCSI.
- Network 1 / Network 2 / Network 3 / Network 4 Setup
 - IP Type : Choose the network connection method.
 - IP Address, Subnet Mask, Gateway, DNS

※ For more details on network settings, refer to the User manual.

► To use a simple intranet, click <Next>.

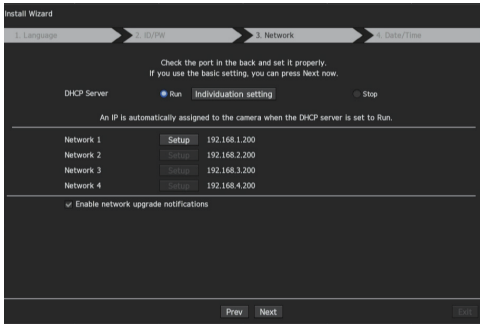

4 Set Date & Time

Set the time and date and click the <Finish> button, and the installation will be completed.

 
5 Camera Registration

When the installation wizard finishes, the camera is automatically registered.

5-1. If the number of searched cameras is 64 or less, the searched cameras will be auto registered.

5-2. If there are more than 64 cameras searched, Camera registration window will be displayed.

Select a camera to register and click the <Register> button.

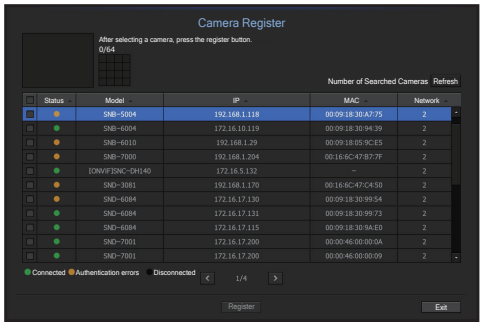


< Figure 5-2 >

Additional camera registration

In the <Install Wizard> setting, make a connection to the camera automatically registered and use the menu path to register and connect a camera.

 Menu → Device → Camera → Cam Registration → Auto

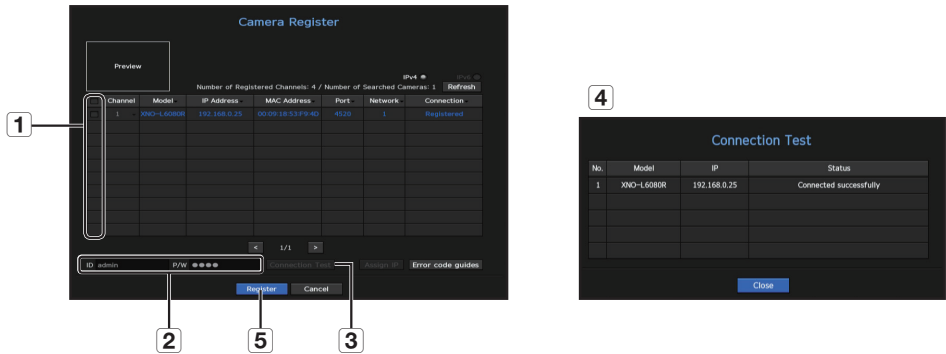


To register a camera, follow these steps:

- 1 Select the camera to register (you can select multiple cameras).
- 2 Click the <ID> and <P/W> window to enter <ID> and <P/W> of the selected network camera. (If you do not register a new ID/PW, then the default ID/PW combination is used.)
- 3 Click <Connection Test>.
- 4 Check the connection results.
- 5 If the channel connected successfully, click <Register> to end the camera registration process.

- Click an item on the table to see a preview (you must change the ID and Password in step “2” if the camera account changes).
- Click the table headers to sort the content.
- Click < Refresh > to check if a new IP address was allocated to the camera when you rescan the network or when an IP address was not assigned by the DHCP server (e.g., 192.168.1.100). If the IP still stays the same, then select Assign IP to assign the IP manually.

Configuring the Recording

 This section outlines how to configure and view the recording settings for each channel.

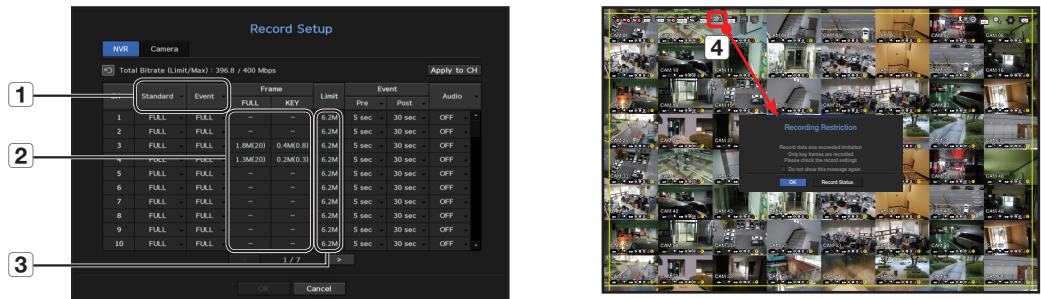


- 1 Shows the standard and event recording method for each channel.
- FULL : Records all the frames received from the camera.
 - KEY : Records only the key frames received from the camera. In general, one or two frames per second are recorded, but you can adjust this in the camera settings.
 - OFF : Turns off recording.
- 2 Shows the transmission size of the recording data for each channel.
- 3 Shows the data size limit for each channel.
- 4 The orange colored channel indicates the case where the 2 input data load is greater than the 3 permitted data load. If you set the 3 permitted data load to greater than the 2 input data loads, it will be changed to orange.
- 5 If the sum of input data for each channel is greater than the max level for the camera, then 4 the recording exceeding icon and the alarm message will be displayed. In this case, for the channel exceeding the input limit will record the main frame(one or two per second) only.

Setting Up the Camera

From the setup menu, you can configure the camera settings (resolution, frame rate, and quality) and other functional settings.

 Menu → Device → Camera → Camera setup

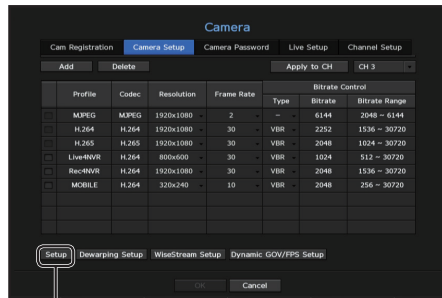



Camera function settings: You can configure the camera settings or the live movie format to change the settings in the camera itself.

- Add : Adds a camera profile.
- Delete : Deletes the selected profile from the list.
- Channel Selection : You can select camera channels to change their video transmission settings.
- Profile : You can check the video profile of the camera connected in the camera setup.
- Codec : You can check the codec for the selected channel.
- Resolution : You can change the resolution of the selected channel.
- Frame Rate : You can change the frame rate of the selected channel.
- Bitrate Control : You can change the bitrate of the selected channel.

Setting Up a Channel

From the channel setup menu, you can change the camera name shown in live mode.

  Menu → Device → Camera → Channel setup

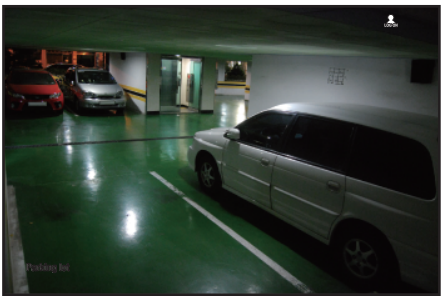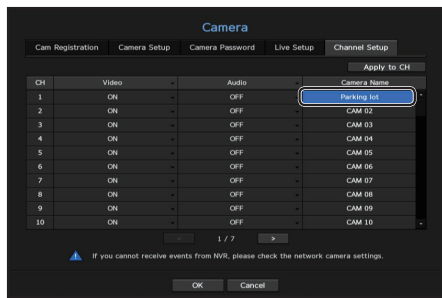


Configure and run layout


You can use the same layout set on the live screen for the Search Time function in order to perform a search using the channel sequence and combination configured by the user.

For more information about the detailed setting method for each stage, refer to the user manual.

 
1 Live channel layout settings

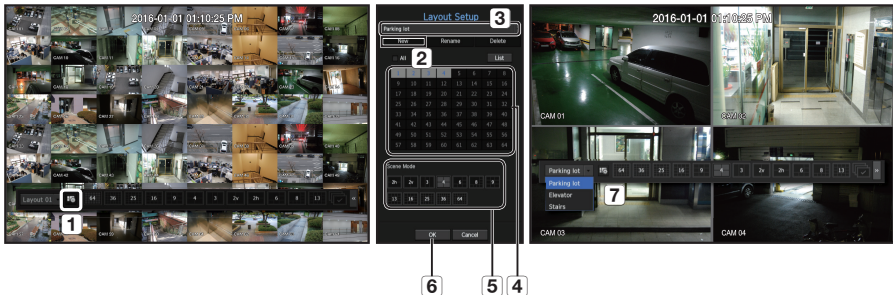

 - 1 Open the channel layout setup menu.
- 2 Click <New>.
- 3 Enter a name for the selected channels (e.g., Parking lot).
- 4 Select the channels that you want to add to the layout (e.g., 1, 2, 3, 4).
- 5 Choose a split mode to apply (e.g., 4-way split).
- 6 Click <OK>.
- 7 Choose a layout to view it on the screen (e.g., change to Parking lot).

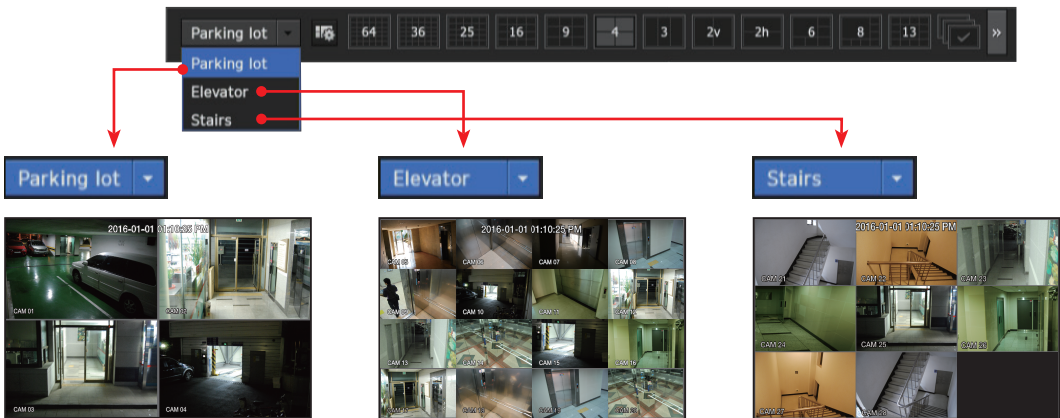


2 Search/Play

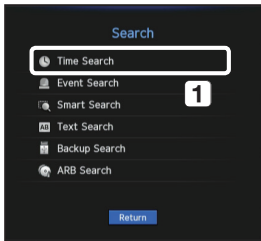 


- 1 In live mode, right-click to select <Search>. Select <Time Search>.

 2-1 Search

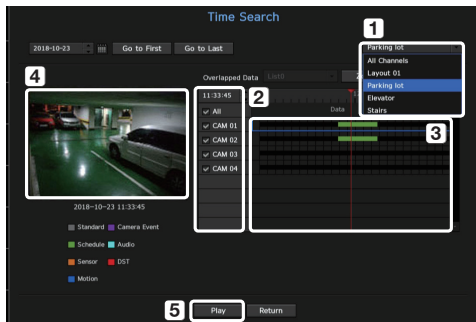

- 1 The initial search option is set to <All Channels>. Select a desired layout from among the channel group created in the live screen.
- 2 Select a channel for each selected group.
- 3 Move the time bar to view the preview screen as shown in Figure 4.
- 5 Press the <Play> button to enter the play screen.

 
2-2 Play

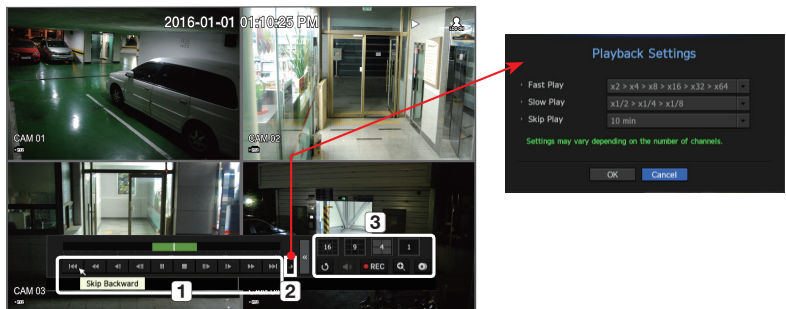

- 1 These are the various functions available for playback. Hover over them and a tool tip will be prompted. Control the playback by referring to the tool tip. (Ex : Skip Backward)
- 2 You can configure specific functions in 1 through playback settings. Ex) Jump to play: 10 minutes, 30 minutes, 1 hour, 24 hours, etc.
- 3 Displays functions that are operating in split mode and during other playback.

3 Backup

 Right-click on the live screen and select <Backup>.

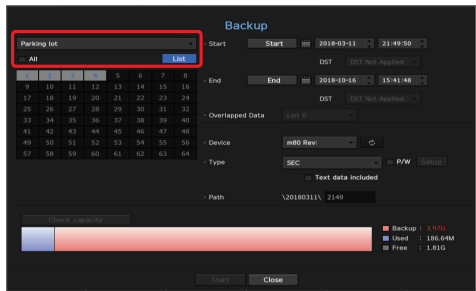

- 1 Select a layout.
- 2 Select a channel.
- 3 Set the time, device, and format to back up.
- 4 Click the <Check capacity> button to check if backup is possible.
- 5 Click the <Start> button to proceed with the backup.

Use the basic guide

Show shortcut menu

Right-click on the live screen and you can access various functions that NVR provides. Hover over an icon and a brief definition of term for each function is prompted.

Layout

Layout Setup

Keep ch. scr ratio

Status

PTZ

ZOOM

Audio

Freeze

Stop Alarm

Capture

Record

Play

Search

Backup

Menu

Shutdown

Logout

Hide Launcher

2016-01-01 01:10:25 PM

CAM 05

2015-01-01 01:10:25 PM

CAM 01

Setup

System

Device

Record

Event

Network

System Management

Log Information

Logout

Return

Live launcher



- 1 You can configure a live layout.
- 2 You can configure a supported split mode. You can view the end sequence () in serial order for a specific period of time for each split mode.
- 3 You can configure additional functions in the live screen, such as alarm control or audio.

Use product information

You can check product information/user manual/firmware information/FAQ/HDD compatibility list, etc. on the website or mobile app on your smartphone.

<http://hanwha-security.com>

<http://hanwha-security.com>

Products

Cameras

Video Recorder

Surveillance Software

Video Recorder

NVR

DVR

Total - 16/32Channel (or more) - 8/9Channel - 4Channel

PRN-4011

New Product Notifications

Newest fr

Include d

Total 14

PRN-4011

Total

Download Selection

	category	file name	Last Updated
<input type="checkbox"/>	Manuals	User Manual-PRN-4...	2016-08-05
<input type="checkbox"/>	Manuals	User Manual-PRN-4...	2016-08-05
<input type="checkbox"/>	Certification	PRN-4011 C-TICK	2014-01-04
<input type="checkbox"/>	Certification	PRN-4011 FCC	2014-01-04
<input type="checkbox"/>	Certification	PRN-4011 VCCI	2014-01-04
<input type="checkbox"/>	Certification	PRN-4011 UL	2014-01-04
<input type="checkbox"/>	A&E Document	PRN-4011 A&E Doc...	2014-03-06
<input type="checkbox"/>	Firmware	PRN-4011 v2.14 16...	2016-07-01

 
Send E-Mail

List



Hanwha Techwin cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products.

The Eco mark represents Hanwha Techwin's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.

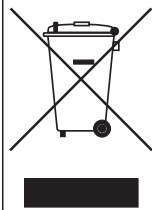

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Head Office

6, Pangyo-ro 319 beon-gil, Bundang-gu, Seongnam-si,
Gyeonggi-do, 463-400 Rep. of KOREA
Tel : +82.70.7147.8753 Fax : +82.31.8018.3740
<http://hanwha-security.com>

Hanwha Techwin America

500 Frank W. Burr Blvd. Suite 43 Teaneck, NJ 07666
Toll Free : +1.877.213.1222 Direct : +1.201.325.6920
Fax : +1.201.373.0124
www.hanwhasecurity.com

Hanwha Techwin Europe

Heriot House, Heriot Road, Chertsey, Surrey, KT16 9DT, United Kingdom
Tel : +44.1932.57.8100 Fax : +44.1932.57.8101
www.hanwha-security.eu

Hanwha Techwin(Tianjin) Co.Ltd

No.11, Weiliu Rd., Micro-Electronic Industrial Park, Jingang Road Tianjin 300385, China
Tel : +86.22.2388.7788
www.hanwha-security.cn

Hanwha Techwin Middle East FZE

JAFZA View 18, 20th floor, office 2001, 2002, 2003, Downtown Jebel Ali,
Dubai, United Arab Emirates
<http://hanwha-security.com>
